




# Supermarine Spitfire Mk. I Early and Mid Gun Bays

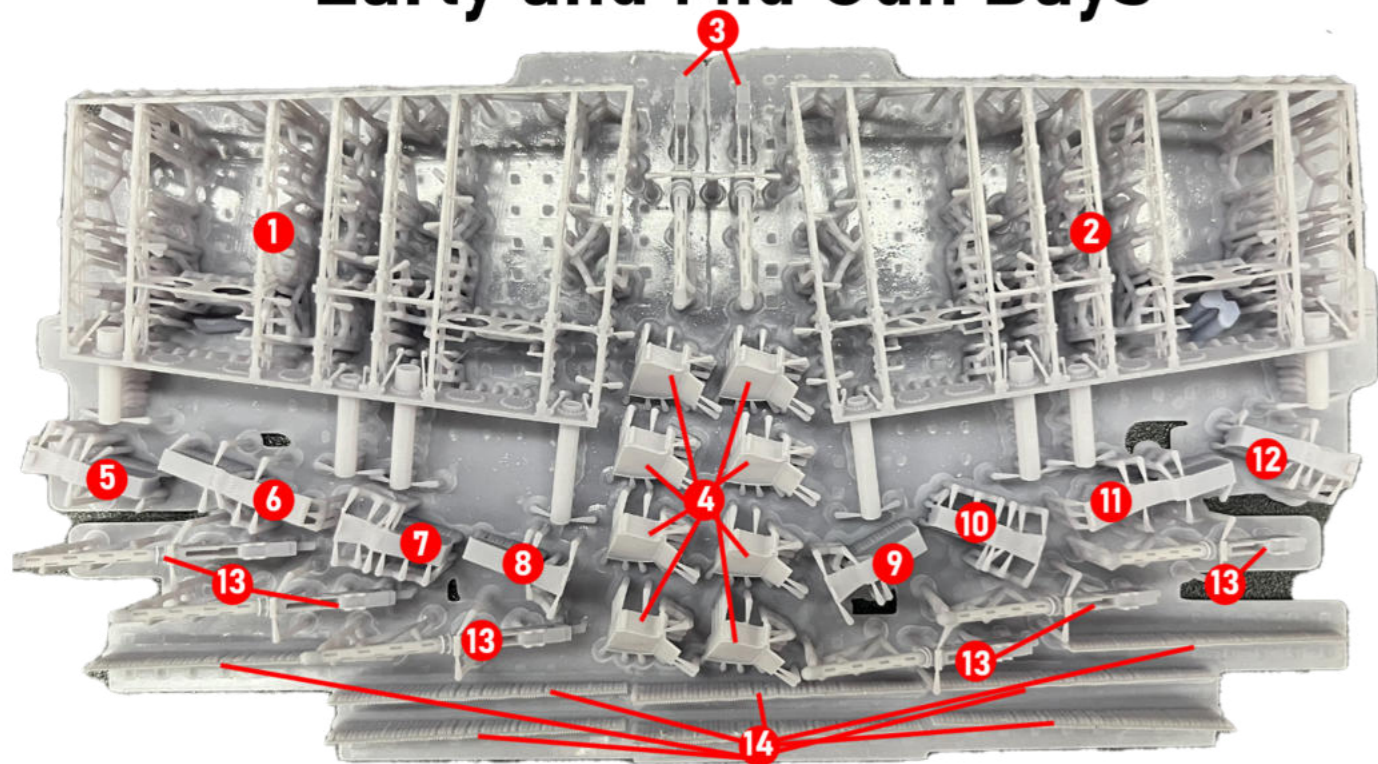

- |                      |                      |                      |
|----------------------|----------------------|----------------------|
| 1=Wing Structure RH  | 6=Ammo Box No 3 RH   | 11=Ammo Box No 3 LH  |
| 2= Wing Structure LH | 7= Ammo Box No 2 RH  | 12= Ammo Box No 4 LH |
| 3= Brownings No. 4   | 8= Ammo Box No 1 RH  | 13= Brownings No 1-3 |
| 4= Empty Ammo Boxes  | 9= Ammo Box No 1 LH  | 14= Ammo Belts       |
| 5= Ammo Box No 4 RH  | 10= Ammo Box No 2 LH |                      |



# Supermarine Spitfire Mk. I Early and Mid Gun Bays

**Step 1**

Note: Make sure that the forward attachment point of the Browning is used is used for guns No. 1-3. For gun No. 4 the aft attachment point is used

**Step 2**

1: Install the ammo box by installing the belt feed under the upper structure unto the Browning feed opening

2: Glue the forward hinge of the ammo box between the hinges on the structure

3: Glue the ammo box unto the pin.

4: Repeat for guns No 2-4

The additional open ammo boxes and belts can be used in a diorama setting. Please search for example pictures on the net.



**Step 3**

Sand down the yellow marked area to a bare minimum. Open the upper gun and lower ammo box access hatches. Cut them out carefully as you need them later on for a diorama!

**Step 4**

Align the gun bay structure within the cut outs for the guns

For colour reference, please check the net! Presumably correct is aluminium for the structure, the inner wings and the ammo boxes. RAF interior green for the belt feed connected to the ammo box